



| Pos | Part Number | Description | Additional Text | Quantity |
|-----|-------------|--------------------------------|-----------------|----------|
| 1 | 28511075000 | Main wiring harness | | 1.00 |
| 2 | 64111060133 | Direct current horn cpl. | | 1.00 |
| 3 | 0025060126 | HH collar screw M6x12 TX30 | | 1.00 |
| 4 | 0025060306 | HH collar screw M6x30 TX30 | | 4.00 |
| 5 | 93541088000 | rollover sensor | | 1.00 |
| 6 | 93811043000 | resistor | | 1.00 |
| 7 | 90511030000 | indicator relay | | 1.00 |
| 8 | 93539010000 | Start OK control unit | | 1.00 |
| 9 | 75011088010 | FUSE 10A 07 | | 9.00 |
| 10 | 75011088015 | FUSE 15A 07 | | 3.00 |
| 11 | 75011088030 | FUSE 30A | | 2.00 |
| 12 | 90611057000 | relay (interlock) | | 4.00 |
| 13 | 28511052000 | Electrical system holding comp | | 1.00 |
| 14 | 69008021160 | special screw M5x12 | | 2.00 |
| 15 | 31008060000 | rubber grommet D=8mm open | | 3.00 |
| 16 | 90239006044 | ignition coil cpl. with plug | | 1.00 |

| | | | | |
|----|-------------|--------------------------------|--|------|
| 17 | 28539006050 | Ignition coil cover | | 1.00 |
| 18 | 28539006040 | Bushing, ignition coil cover | | 2.00 |
| 19 | 0025060356 | HH collar screw M6x35 TX30 | | 2.00 |
| 20 | 28511058050 | Holder, starter relay | | 1.00 |
| 21 | 83008000012 | special screw M6x12x3 | | 2.00 |
| 22 | 77307040041 | Isolation pad | | 1.00 |
| 23 | 90111058000 | STARTER RELAY | | 1.00 |
| 24 | 28511097000 | earth wire 10mm | | 1.00 |
| 25 | 28511059000 | Starter cable 10mm | | 1.00 |
| 26 | 28511076000 | harness rear | | 1.00 |
| 27 | 93011034000 | Voltage regulator | | 1.00 |
| 28 | 28511034010 | Metamoll 70x25x3 self-adhesive | | 1.00 |
| 29 | 27011080000 | Cable for flasher | | 1.00 |
| 30 | 76511030000 | FLASHER UNIT | | 1.00 |
| 31 | 76511030010 | Rubber strap, flasher unit | | 1.00 |