


3

SETTING look owner's manual	LC4 ENDURO A606.01.098.000		FORK		SHOCK	
	Compression (clicks)	Rebound (clicks)	Comp. low speed (clicks)	Comp. high speed (clicks)	Rebound	Spring preload (mm)
Comfort	20	20	20	2	20	18
Standard	15	15	15	1,5	15	18
Sport	10	10	10	1	10	18
Max. payload	10	10	10	1	10	25

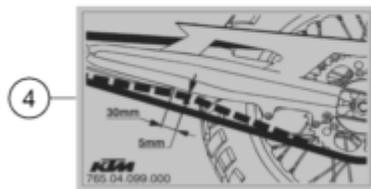

8

SPARE 25A	FUSE 25A	ABS control unit
SPARE 10A	FUSE 10A	ABS control unit
SPARE 10A	FUSE 9 - 10A	ABS wakeup, dashboard wakeup, bCCU wakeup, 6D sensor, OBD
SPARE 15A	FUSE 8 - 15A	ACC2, USB-charging, HCU
SPARE 10A	FUSE 7 - 10A	ACC1
SPARE 10A	FUSE 6 - 10A	High beam, low beam, position, tail, licence light
SPARE 10A	FUSE 5 - 10A	Horn, brake light
SPARE 10A	FUSE 4 - 10A	radiator fans
SPARE 10A	FUSE 3 - 10A	fuel pump
SPARE 10A	FUSE 2 - 10A	ignition, ECU, EWP, fuel injection, lambda sensor
SPARE 10A	FUSE 1 - 10A	ignition, dashboard, bCCU
SPARE 30A		
	FUSE - 30A	main fuse A606.11.087.010



Pos	Part Number	Description	Additional Text	Quantity
1	A60007098000	Fuel tank sticker EU		1.00
2	63003596000	LABEL M+S V-LIMIT 07		1.00
3	A60601098000	Decal std setting LC4 ENDURO		1.00
4	76504099000	Sticker "Kettenspannung"		1.00
5	A60503095000	Sticker ECE		1.00
6	A60603098000	Decal technical information End		1.00
7	21003094000	Sticker "EAC"		1.00
8	A60611087010	Decal fuse box		1.00
9	LI25-A605-4A			1.00